
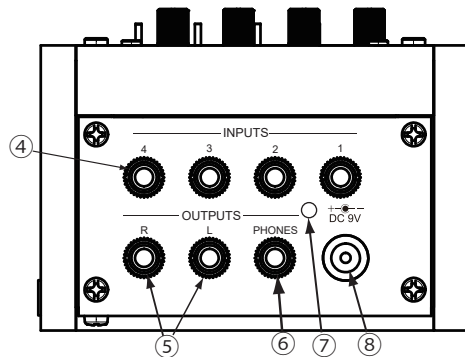


# 4ch Mixer MANUAL

4ch Mixerは、モノラル4チャンネル入力、ステレオ出力を備えたアナログミキサーです。各チャンネルにはパンポットが装備されており、左右細かな音量調整が可能です。サイズはコンパクトで85x85x57mmと、使用場所を選ばずに設置できます。

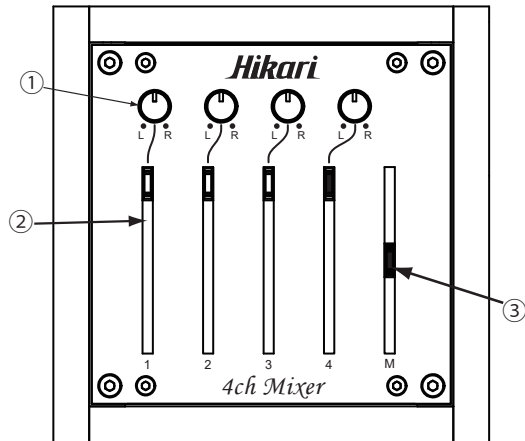

## ①PAN

MAIN OUTに送る各チャンネルの音量バランスを調整し、音像をのL/Rどの位置に定位させるかを決めます。つまみが12時の位置にあるときはL/Rに同じ音量で送られ、音像は中央に定位します。

## ②LEVEL

各チャンネル間の音量バランスを調節します。

## ③MAIN LEVEL

OUTPUTSから出力される全体の音量を調節します。

## ④モノラル入力端子(チャンネル1~4)

楽器、オーディオ機器を接続します。ミニフォンプラグ(3.5mm)に対応しています。

## ⑤MAIN OUT

ミニフォンプラグ(3.5mm)に対応しています。

## ⑥PHONES出力

ヘッドフォンを接続します。ステレオミニフォンプラグ(3.5mm)に対応しています。

## ⑦POWER LED

電源が入ると点灯します。

## ⑧ACアダプタージャック

BOSS タイプの9V センターマイナス AC アダプター (別売り) を接続します。

\* 推奨アダプター: BOSS PSA-100

## ①PAN

Adjusts the balance of each channel sent to the Main out, and determines the positioning of the sound image between left and right. When the knob is located at the 12 o'clock position, the channel's sound will be sent to the stereo bus channels (L and R) at the same volume. In this case, the sound image is positioned at the center.

## ②LEVEL

For adjusting the volume balance among the channels.

## ③MAIN LEVEL

Adjusts the overall volume output from the OUTPUTS

## ④Mono input jacks (channels 1-4)

These jacks support mini phone plugs(3.5mm).

## ⑤MAIN OUT

These jacks support mini phone plugs(3.5mm).

## ⑥PHONES output jack

for connecting a set of headphones.

These jacks support a stereo mini phone plugs(3.5mm).

## ⑦POWER LED

Lights when the power is turned on.

## ⑧AC ADAPTER JACK

Please use a standard 9V center-negative power supply such as a Boss PSA-100 or similar (not included).